


PoE Z-Wave 800& ZigBee 3.0 Controller Network Unit work on USB mode

1. Place jumper between pin 39 and pin 40, plug USB cable to Pi 4B or Pi5

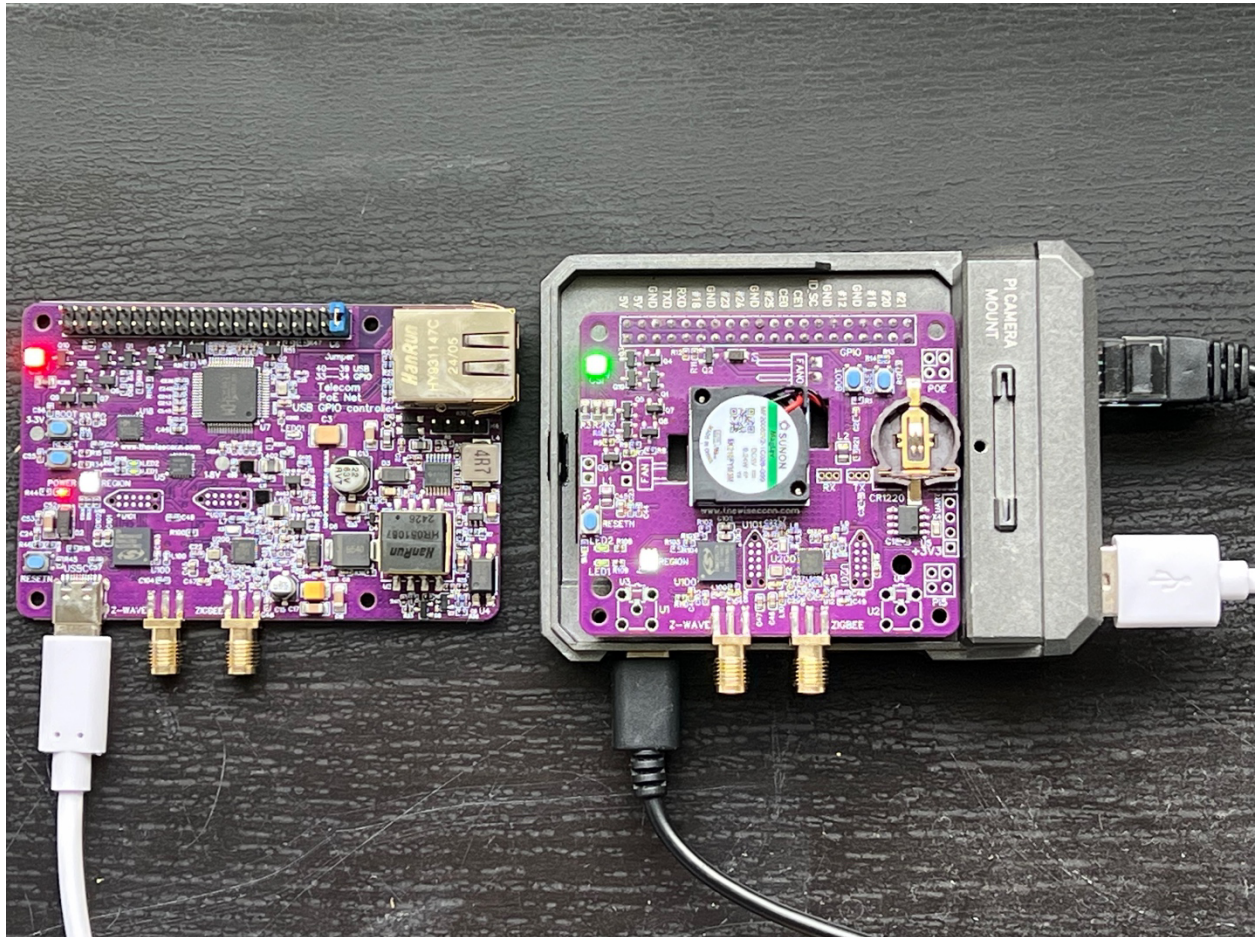

2. Login Pi4B or Pi5

```
homeseer@HTPi4HubG2AP:~ $ ls -l /dev/ttyA*
```

```
crw-rw---- 1 root dialout 166,  0 Jun 23 13:03 /dev/ttyACM0
crw-rw---- 1 root dialout 166,  1 Jun 23 13:03 /dev/ttyACM1
crw-rw---- 1 root dialout 204, 64 Jun 21 23:52 /dev/ttyAMA0
crw-rw---- 1 root dialout 204, 68 Jun 21 23:52 /dev/ttyAMA4
crw-rw---- 1 root dialout 204, 69 Jun 21 23:52 /dev/ttyAMA5
```

Normally, ttyACM0 is Z-Wave port, ttyACM1 is ZigBee port, use these port to configure Z-Wave JS and ZigBee2MQTT.